

Rack Panel Overview

The Equipment in this classroom is maintained by Classroom Support Services (CSS)

TROUBLESHOOTING

If volume is on but no sound, double check the amplifier on/off switch and cable connections. (If there is still no sound, laptop volume is the same knob as VHS.

If the projector won't display and is in the ON position, double check your wire connection and laptop mirroring. If it still does not work, contact CSS.



Please Ignore These buttons


WIRELESS RECEIVER: Wireless microphone requires setup. Contact CSS for help.

PROJECTOR ON/OFF
SMART PANEL VOLUME CONTROL

AUX INPUT: RCA cables needed for video and audio display/sound.

AMPLIFIER ON/OFF

LAPTOP SHELF: Pullout laptop shelf. Always lock drawer in open position when using.

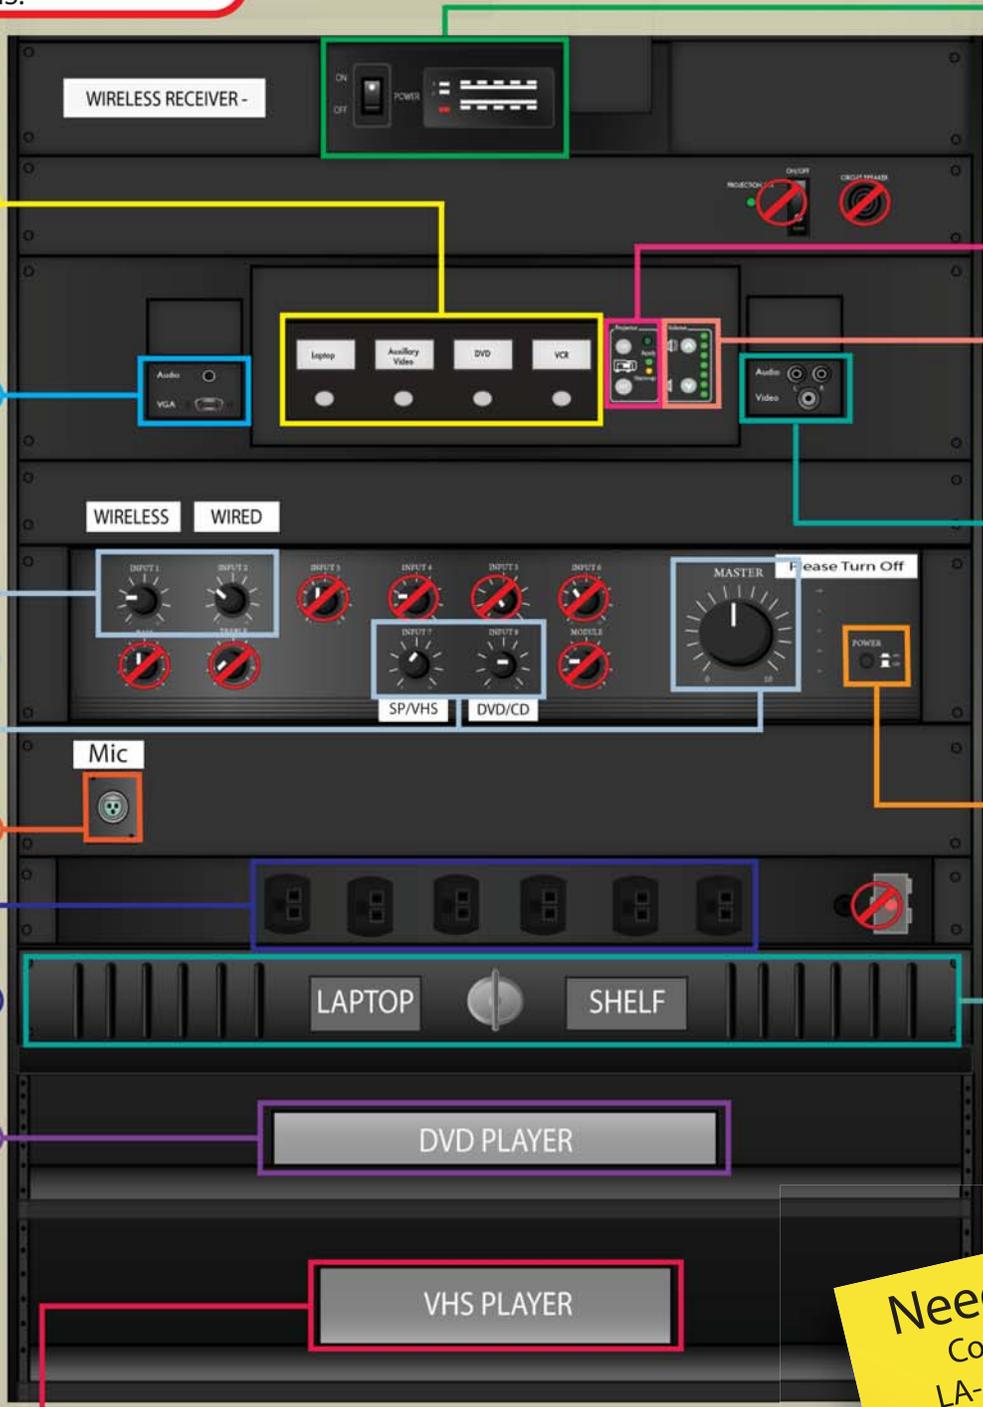

INPUT SOURCE SELECTION: Change sources

LAPTOP INPUT: VGA Cord needed for display, and audio cable needed for sound.

AUDIO KNOBS: Adjust volume with knobs as marked.

WIRED MIC

POWER STRIP

DVD PLAYER: Plays DVD and Audio CDs. Region 1 DVDs only.

VCR / VHS PLAYER


ATTENTION

For academic purposes only.

Need Help?
Contact CSS
LA-1 Room 107
(562) 985 - 4962
M-TH 7:30 AM - 10 PM
Friday 7:30 AM - 5 PM

Classroom Support Services (CSS)

LA-1 Room 107 | (562)985-4962 | M-TH 7:30am-10pm. Friday 7:30am-5pm.

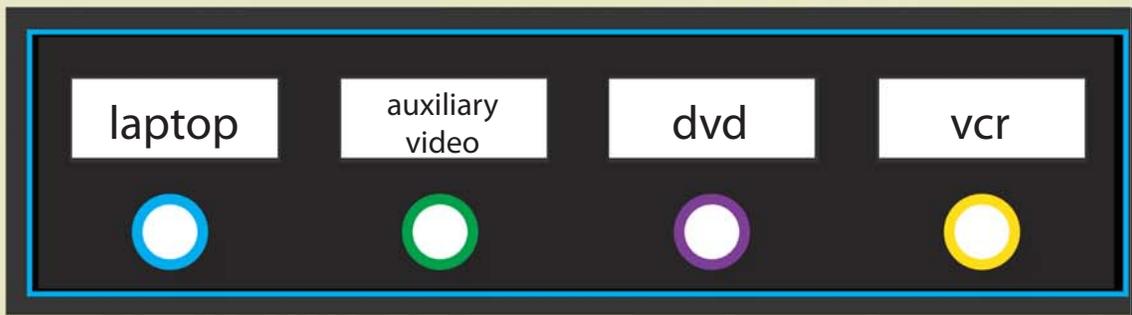

Need Equipment?

VGA cables, audio cables, corded and wireless microphones, DVD and VHS remotes are available for checkout at CSS.

✓ The display selection panel (above) is where you choose what will be displayed on the projector.

Laptop

1. Press "Projector on" button.
2. Plug VGA cables from laptop to laptop input VGA.
3. Plug audio cable from laptop to audio jack (above laptop input / VGA input) optional.
4. Turn on laptop.
5. Press Laptop button in Input Source Selection. (Source buttons only change after Projector on/off ready light turns green.)
6. You may need to mirror your laptop to display from computer. See settings on LAPTOP MIRRORING. (on the right).
7. Turn on audio amplifier (adjust volume with knob marked "VHS/SP" and "Master") optional.
8. Turn off system and amplifier when finished.



LAPTOP MIRRORING

DVD / VCR

1. Press "Projector on" button.
2. Turn on DVD or VCR player.
3. Press DVD or VCR button on panel. (Source buttons only change after Project on/off ready light turns green.)
4. Turn on Audio Amplifier (adjust volume with knob marked "VHS/SP" or "DVD/CD" or "Master")
5. Play Video.
6. Turn off system and amplifier when finished.



On a PC or MAC you may need to set laptop to mirror. Shortcuts include:

PC

Dell FN+F8
Sharp FN+F5
HP FN+F5
Fujitsu FN+F10
Gateway FN+F3
Compaq FN+F5
Toshiba FN+F5
IBM FN+F7

MAC

Sys Preferences
↓
Displays
↓
Detect Displays

Wired Mic

1. Plug Mic cable in wired mic jack.
2. Turn on audio amplifier (adjust volume with knob marked "wired" and "master").
3. Talk into mic (mic sometimes has an on/off switch).
4. Contact CSS for training.

Camcorder

1. Press "Projector on" button.
2. Plug RCA cables from camcorder to panel.
3. Press auxiliary video button.
4. Turn on camcorder.
5. Turn on audio amplifier (adjust volume with knob marked "VHS/SP" and "master").

Wireless Mic

1. Turn on wireless receiver.
2. Turn on portable mic transmitter
3. Turn on amplifier (adjust volume with knob marked "wireless" and "master").
4. Talk into mic.
5. Contact CSS for training.